


SteelMaster Buildings, LLC
Standard "KEYWAY" Foundation

Grouting the outside of the building is done on a minimum of 1" slope, so that water will run away from the building.
Grout the inside of the building flush with the slab.

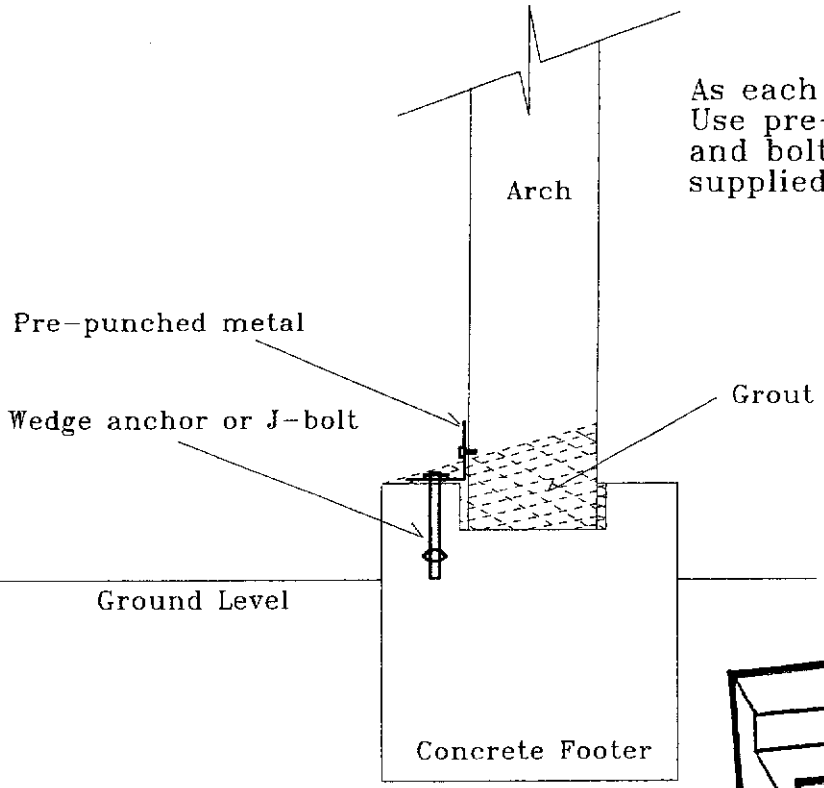

As each arch is stood in place, it should be bolted down. Use pre-punched metal, securing them with wedge anchor/J-bolt and bolting the arch in place with the existing bolts and nuts supplied with the building.

Side wall "Arch" Profiles

